





Sage System™ Installation Steps

Sunshade — For 8' x 8' Pergola

Tools Needed

	Drill
	1/4" hex driver bit
	Ladder
	1 person

Parts Included

- 8 Installation brackets
- 18 SD10112DBB
- 1 Sunshade

Step 1




Position and attach bracket to top of each corner with included fasteners. Brackets should be positioned to allow straps to be tightened once installed.

Step 2



Attach sunshade corner straps to all corner brackets. Ensure sunshade is centered in opening.

Step 3

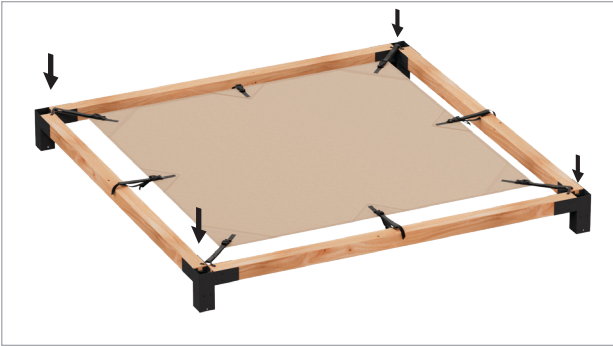

Tighten all corner straps.

Step 4



Pull side straps to beam to align bracket and mark bracket locations on all sides.


Sage System™ Installation Steps

Sunshade — For 8' x 8' Pergola

Outdoor Accents®

SIMPSON
Strong-Tie

Step 5

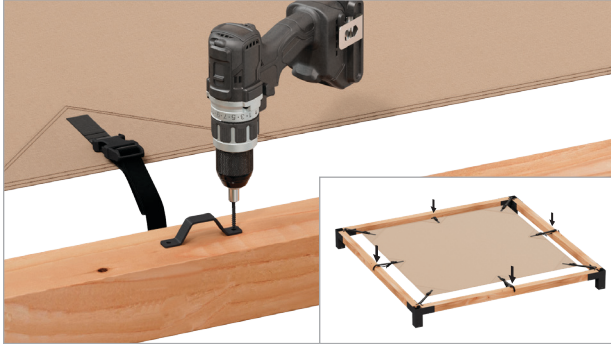

Attach all side brackets in marked locations with included fasteners.

Step 6



Attach all sunshade side straps to brackets (do not tighten completely until all straps are attached).

Step 7



Fully tighten all side straps. Once side straps are fully tightened, ensure corner straps are pulled tight.



Tips & Tricks

- Recommend taking down sunshade in high winds or winter.
- When installing, evenly tighten straps/buckles to provide an even reveal. Pull straps until sunshade is snug, but do not tighten excessively.
- If straps are long, wrap excess strap around itself for a cleaner appearance.
- When doing a double pergola, place side installation brackets in a manner to allow placement of both brackets on each beam.